
Precision flooring Cleaning and Care

Maintenance instructions

Preventative maintenance

It is important that the entrance floor carpet stops as much dirt as possible. A good entrance carpet has a brushing and absorbing effect.

Maintenance

The carpet should be regularly and thoroughly vacuumed from the start. Vacuuming is the most important element of maintenance. It prevents dirt from becoming trapped in the pile material and discolouring the carpet as a result.

The frequency of vacuuming should be aligned to the local conditions, such as the intensity of use. The most frequently used areas of the carpet, like the entrance, the walk-ways and by seating should be intensively vacuumed. Vacuum in slow movements to ensure the dirt is removed. Vacuuming with the bristles is a good idea.

Stain removal

Stains should be removed as soon as possible. When using a stain remover, check with the manufacturer that it will not damage vinyl flooring. Use a scrubbing brush and always rinse with water afterwards. Some substances that can be found in rubber feet, rubber mats, trolley wheels etc. can cause discolouration after long contact that cannot be removed. In the event of an oil spill, wipe up immediately, as the surface may be discoloured. If in doubt about suitability of a stain remover, test on an off cut before you commit it to your fitted product or rug.